


NEW - Acrylic Top Mount Brackets | Written Directions


(For PotLuck and Vista BRPV Rectangle Planters)

ASSEMBLE BRACKETS

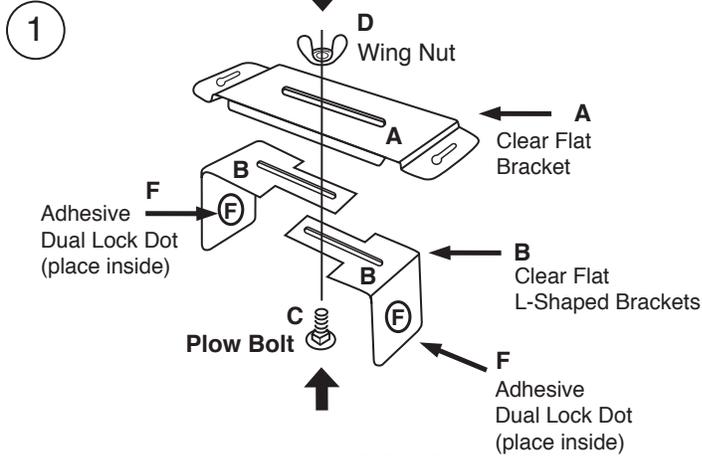


Assemble brackets, leaving the **Wing Nut (PART D)** loosely threaded onto **Plow Bolt (PART C)**

POSITION BRACKETS

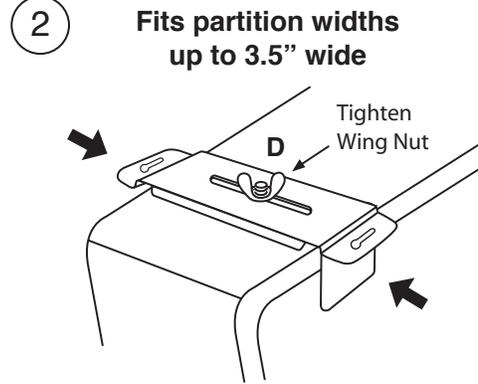


Position brackets onto top of partition, adjusting for width and a tight fit. **Tighten Wing Nut (PART D)**

INSERT SCREWS into bottom of container

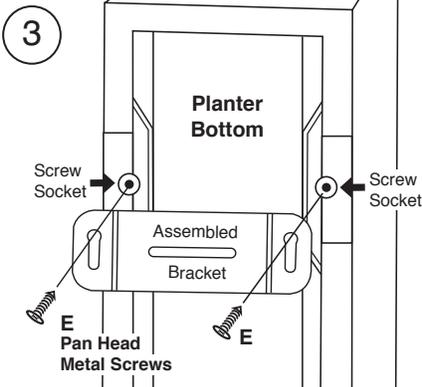


Remove assembled bracket from partition. Insert **Pan Head Screws (Part E)** into screw sockets on bottom of planter. Align assembled bracket. (Allow for space for bracket to be able to slide)

ATTACHING & ALIGNING Dual Lock Dots to Partition and Brackets

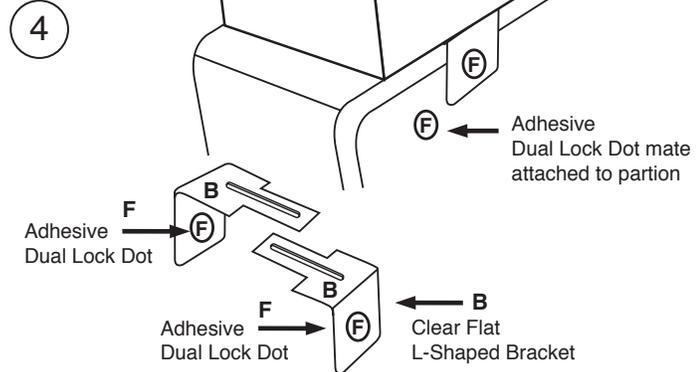

Attach one Transparent **Dual-Lock Adhesive Dot (PART F)** to inside of each **L-Shaped Bracket (PART B)** and its corresponding mate to the partition wall so they will match up (repeat for remaining bracket parts)

LOAD RECTANGLE PLANTER

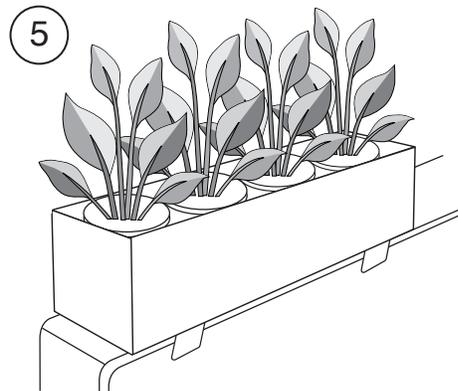

Load your planter container with plants and top dressing as desired. Re-align screws from bottom of planter to pre-drilled slots on brackets and slide into place.

np NewPro
CONTAINERS

800•869•9285

www.newprocontainers.com

NEW - Acrylic Top Mount Brackets | Written Directions

(For PotLuck and Vista BRPV Rectangle Planters)

Fits partition widths up to 3.5" wide

1. Assemble Brackets

- a. Place **Clear Acrylic Flat Bracket Part (Part A)** face-down so "NewProContainers.com" faces you.
- b. Place **Clear Acrylic L-Shaped Bracket Parts (Part B)** into recessed area of **PART A**, aligning pre-cut slot.
- c. Insert one **Plow Bolt Square Shoulder (Part C)** into pre-cut slot.
- d. Attach **Wing Nut (Part D)** to the bolt, fastening until snug, but not tight (this will be adjusted). Wing nut should be on top of bracket assembly.

2. Position Brackets

- a. Position assembled bracket/s on top of partition & adjust for width so bracket is as close to and tight against the partition as possible.
- b. Tighten **Wing Nut (Part D)**
- c. Remove one assembled bracket to use as a guide on Step 3.

3. Insert Screws into Container

- a. Place Assembled Bracket into recessed area of plant container bottom, lining pre-drilled screw slot on bracket with screw sockets on planter.
- b. Screw one **Pan Head Metal Screw (PART E)** into screw slot – but not completely secure – the bracket assembly must be able to slide.
- c. Repeat for three remaining screw sockets.

4. Position Brackets & Attach Container

- a. While your container is empty, position mounting brackets on the partition, lining up the screws from the bottom of the container with the pre-drilled slots on the brackets.
- b. Attach one transparent **Dual-Lock Adhesive Dot (Part F)** to the inside of each **L-Shaped Bracket Part (Part B)** and another on the partition wall so they will match up. Repeat for remaining 3 bracket parts.
- c. Remove container for loading.

5. Load Plant Container

- a. Load your rectangle planter with plants and top dressing as desired.
- b. Re-align screws from the bottom of container to pre-drilled slots on brackets and slide into place.



800•869•9285

www.newprocontainers.com